

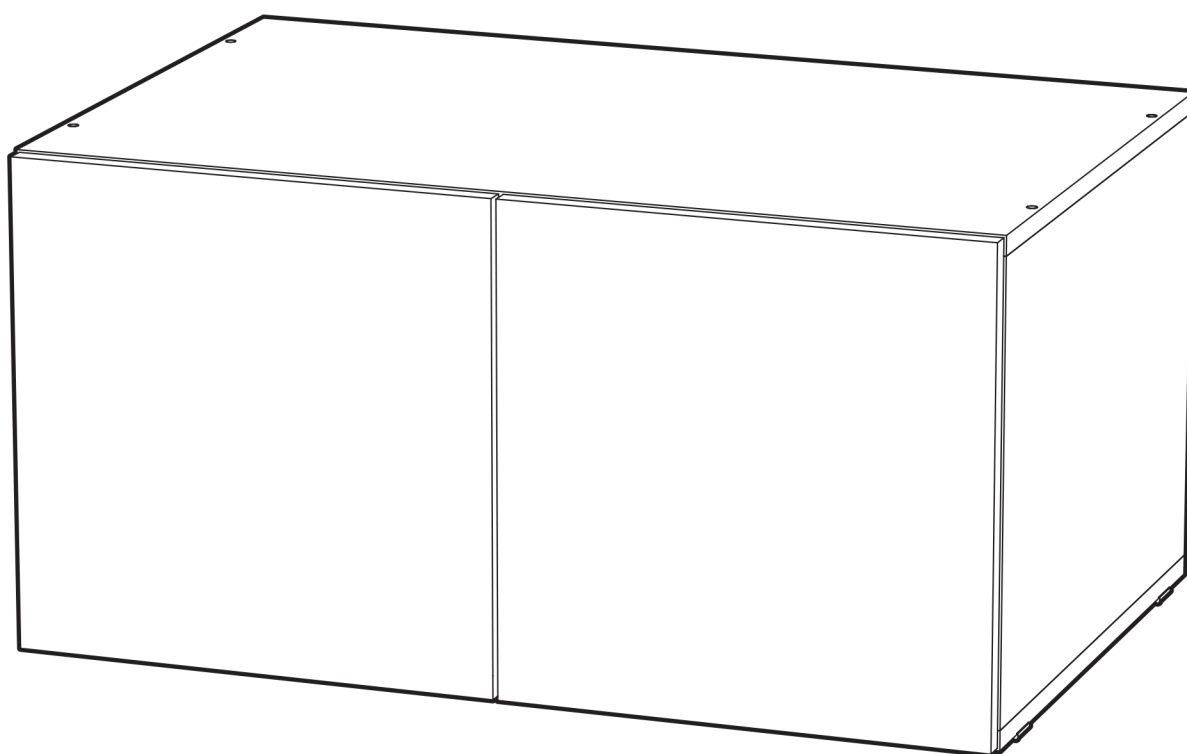
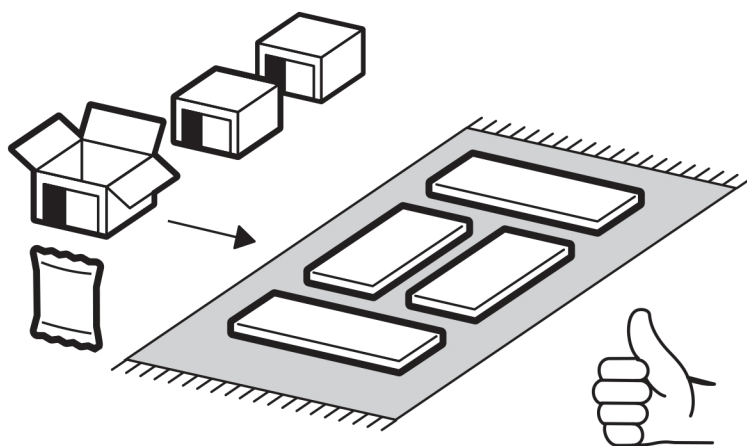
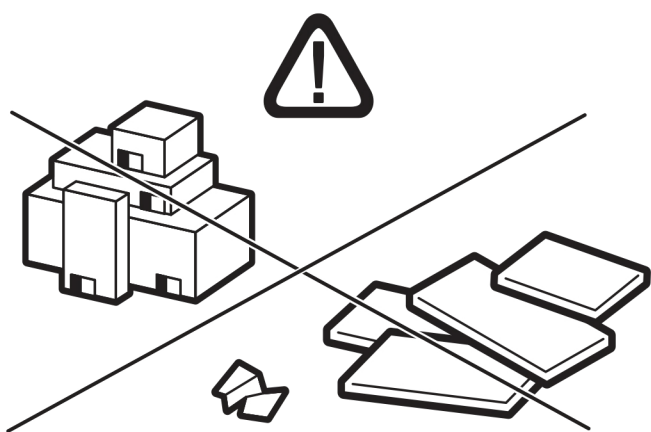


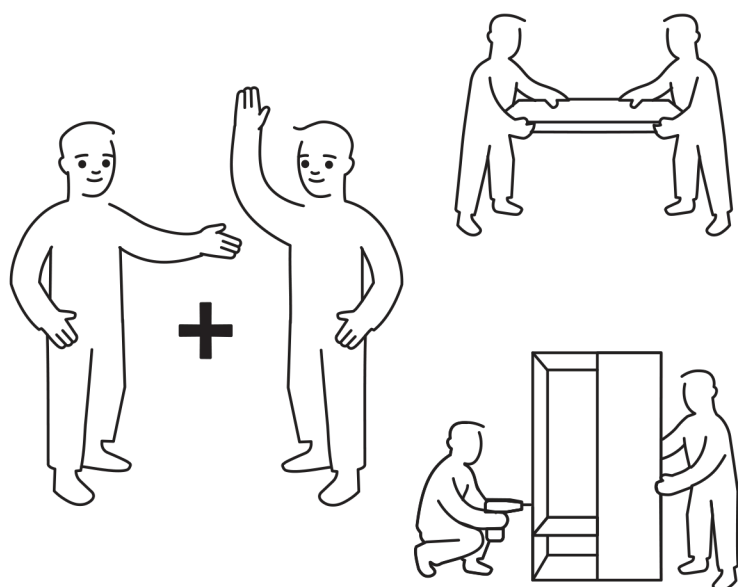

БЕРГЕН A-800









BERGEN A-800

		
800	400	520

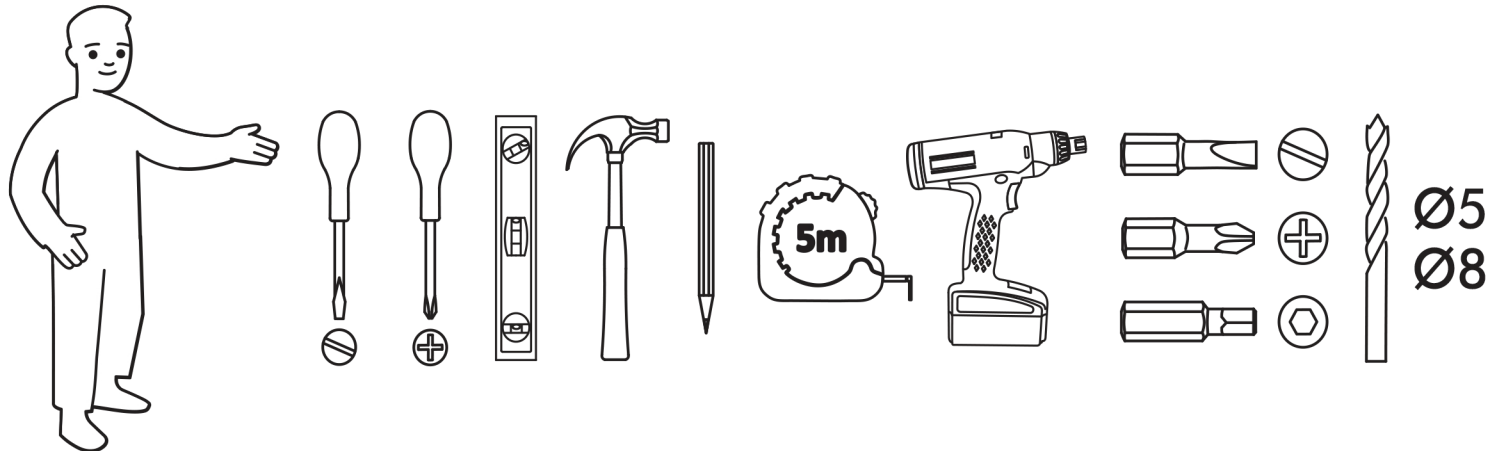

RU Внимание! Чтобы избежать неприятных последствий, воспользуйтесь услугами профессиональных сборщиков мебели. Производитель оставляет за собой право вносить изменения в конструкцию изделий, не влияющие на функциональность и дизайн.

EN Attention! To avoid unpleasant consequences, use the services professional furniture assemblers. The manufacturer reserves the right make changes to the design of products, not affecting functionality and design.

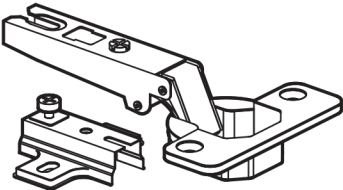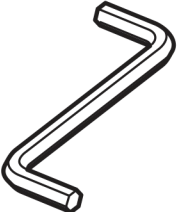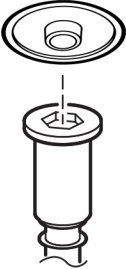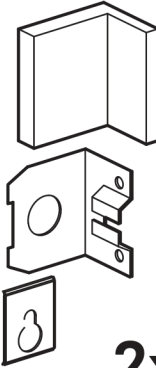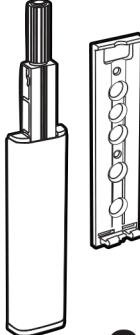		6,3x50		3,5x16	6,3x13	1,6x25
						
4x		9x	1x	26x	9x	20x
						
9x	4x	4x	2x	2x		

 1 2 3	AI		 L=mm		
1	Крышка / Cap	2	800	500	1/2
2	Бок / Side	2	368	500	1/2
3	Фасад / Front	2	396	396	1/2
4	Задняя стенка / Back wall	1	796	396	1/2





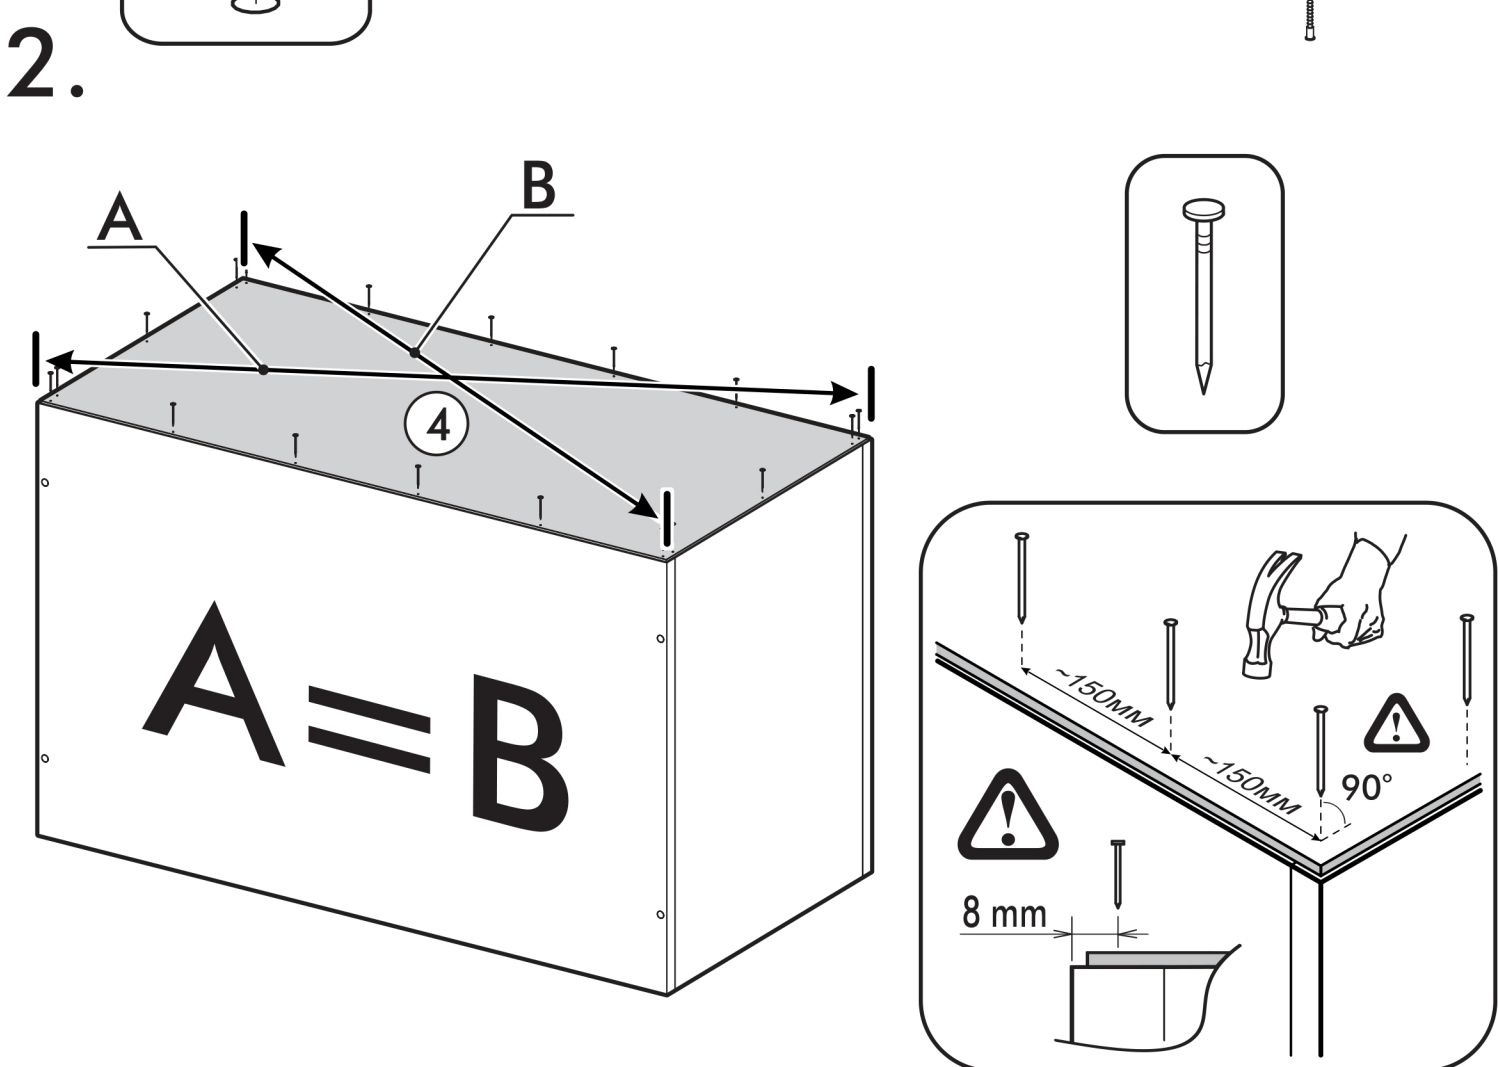




Diagram 3 illustrates the mounting of the base plate. The base plate (labeled 3) is shown with two mounting brackets (labeled 2) being attached to its top edge. A callout shows a close-up of the bracket being secured with screws. A separate callout shows a long screw being inserted into the plate.

[illegible]

5a.

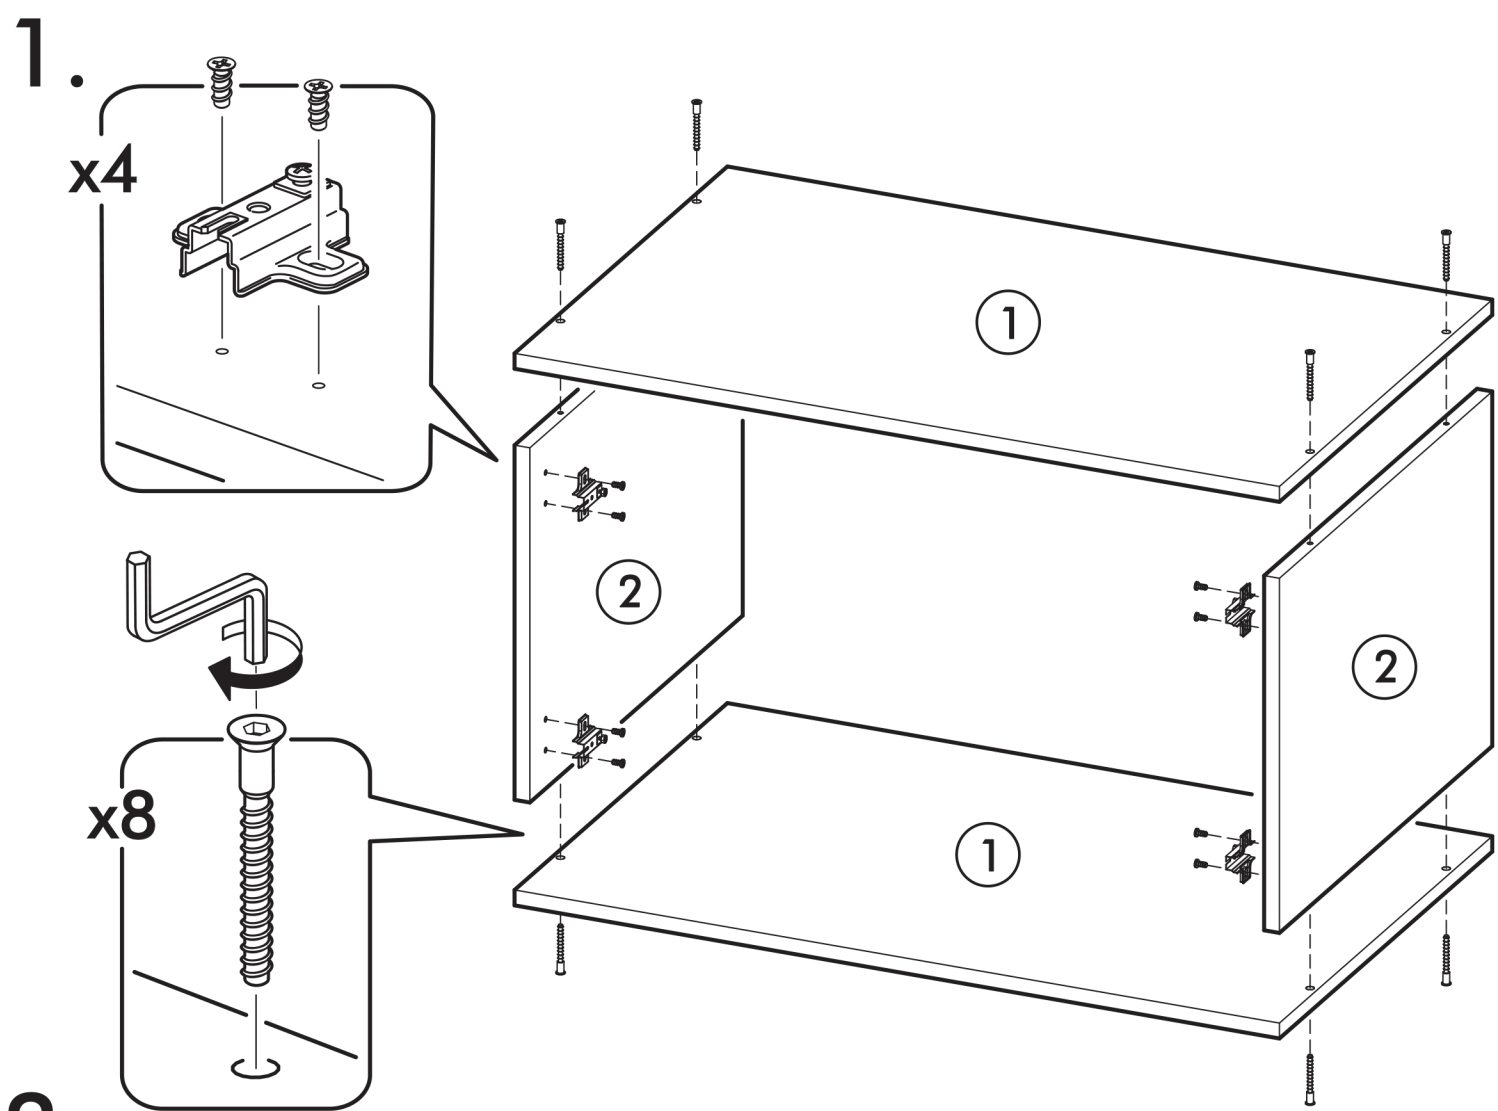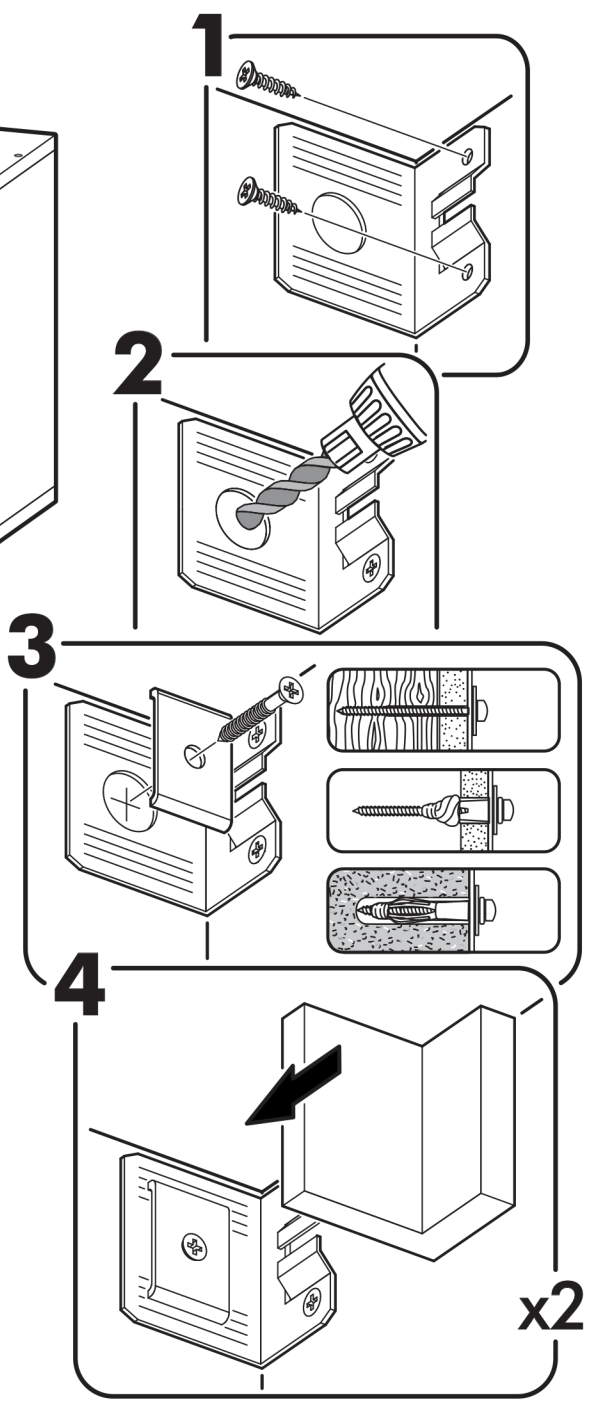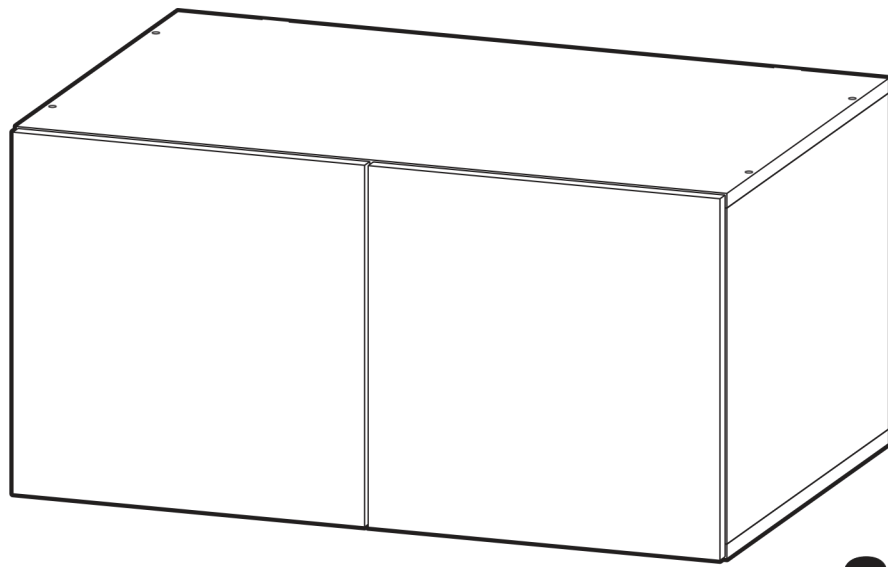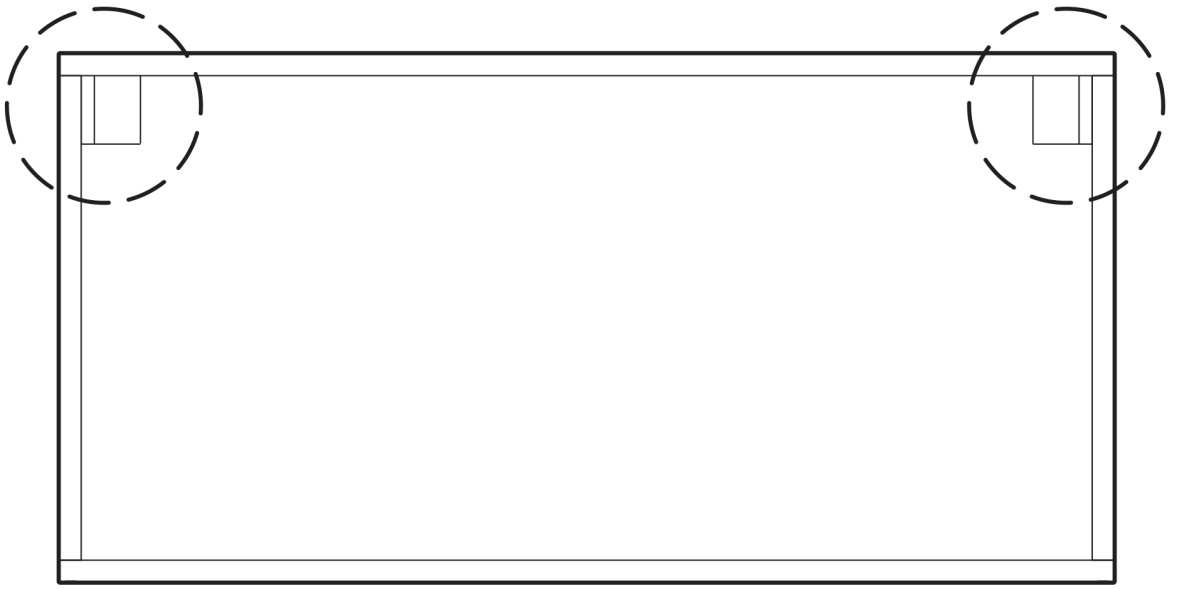

5b.

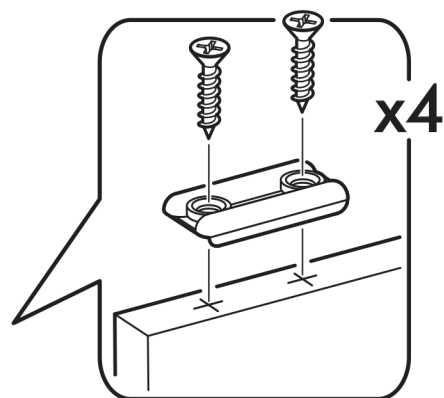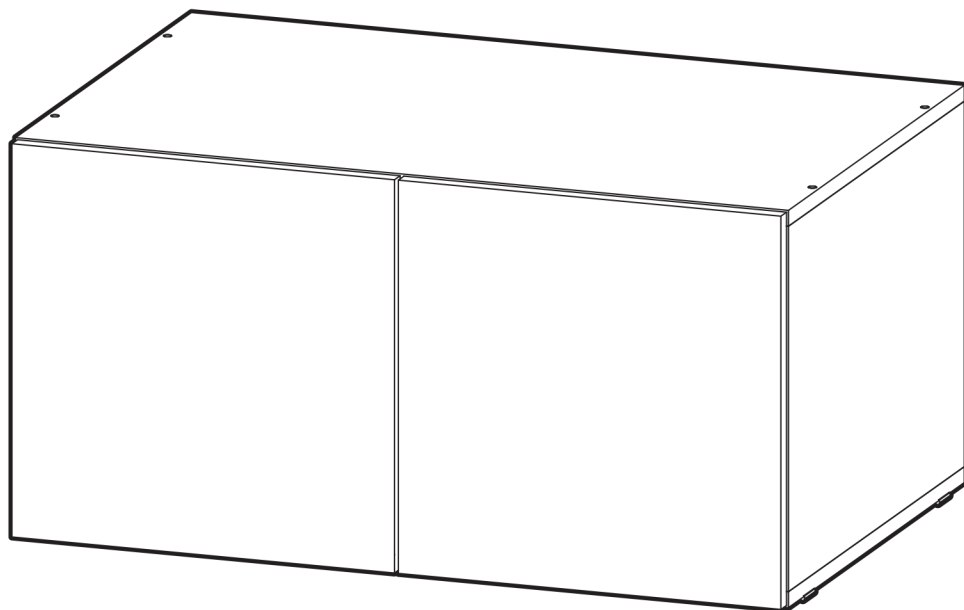

5c.

