

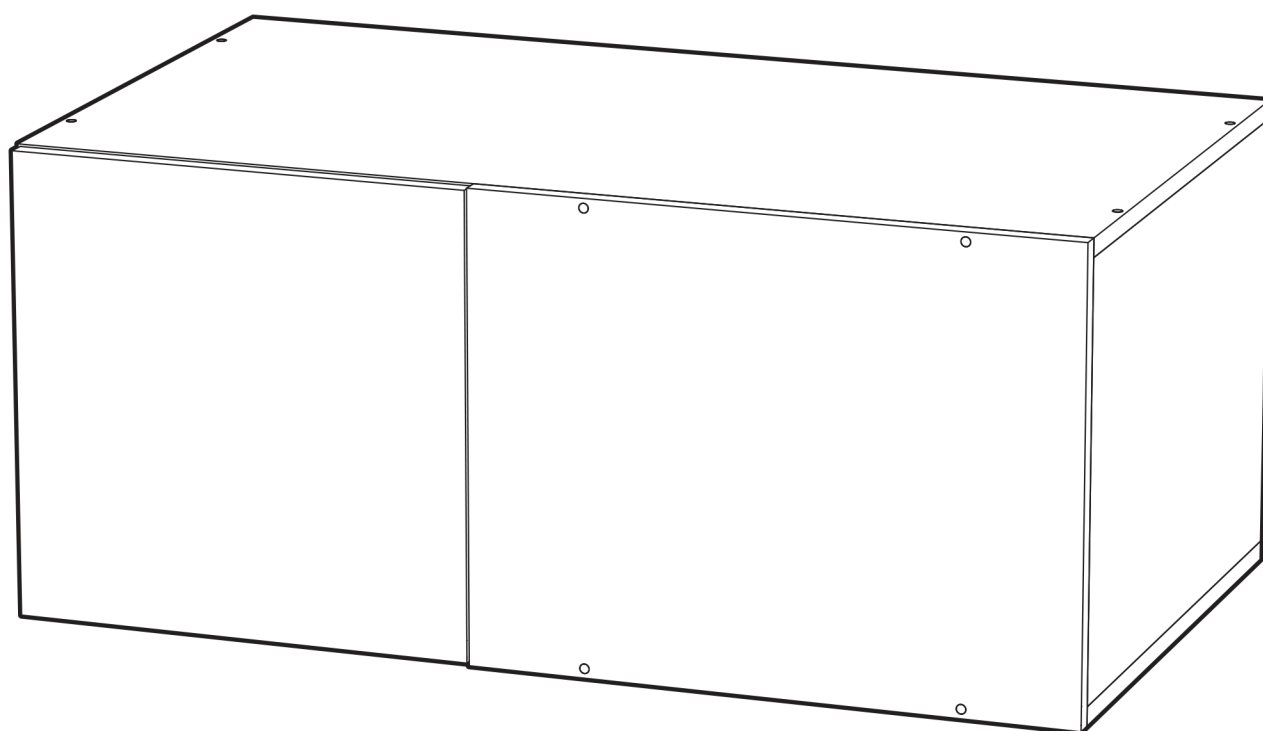
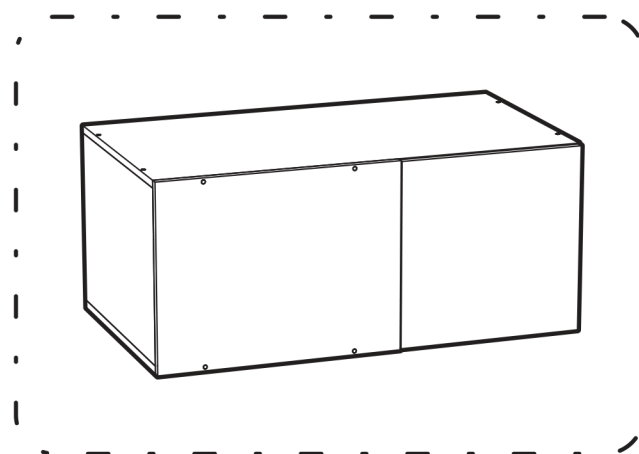
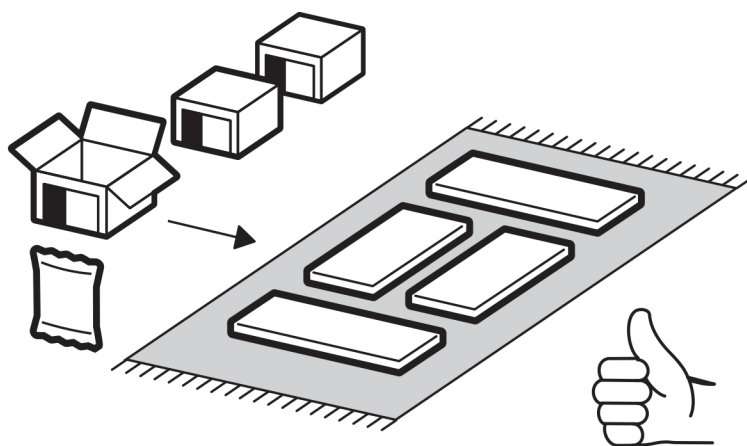
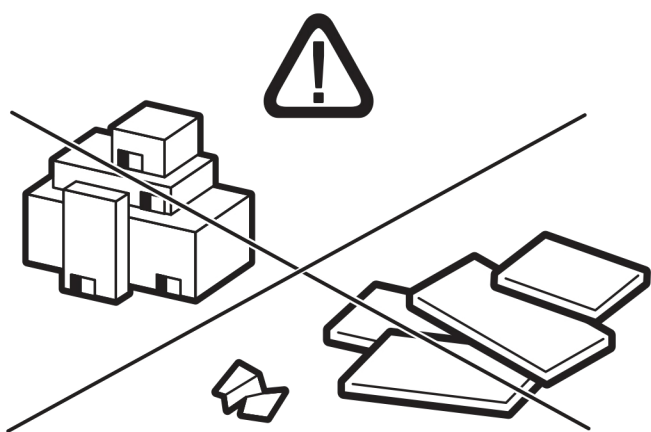


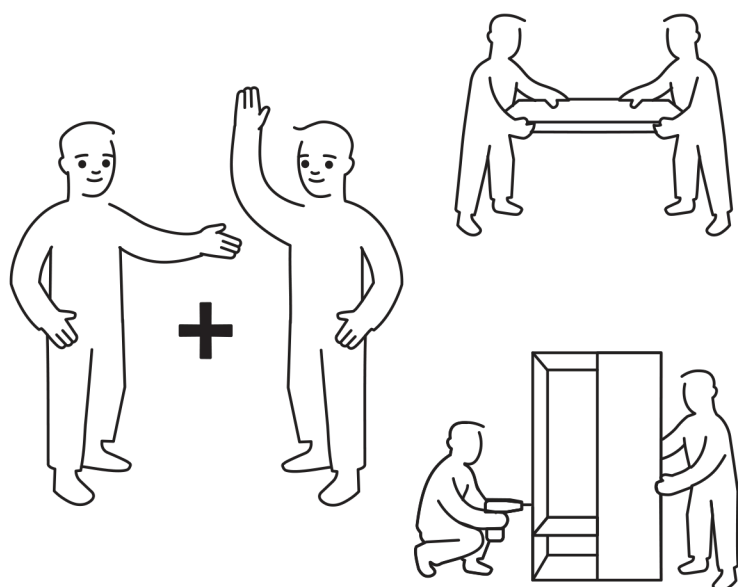








БЕРГЕН АУ-920 BERGEN AU-920

		
920	400	520

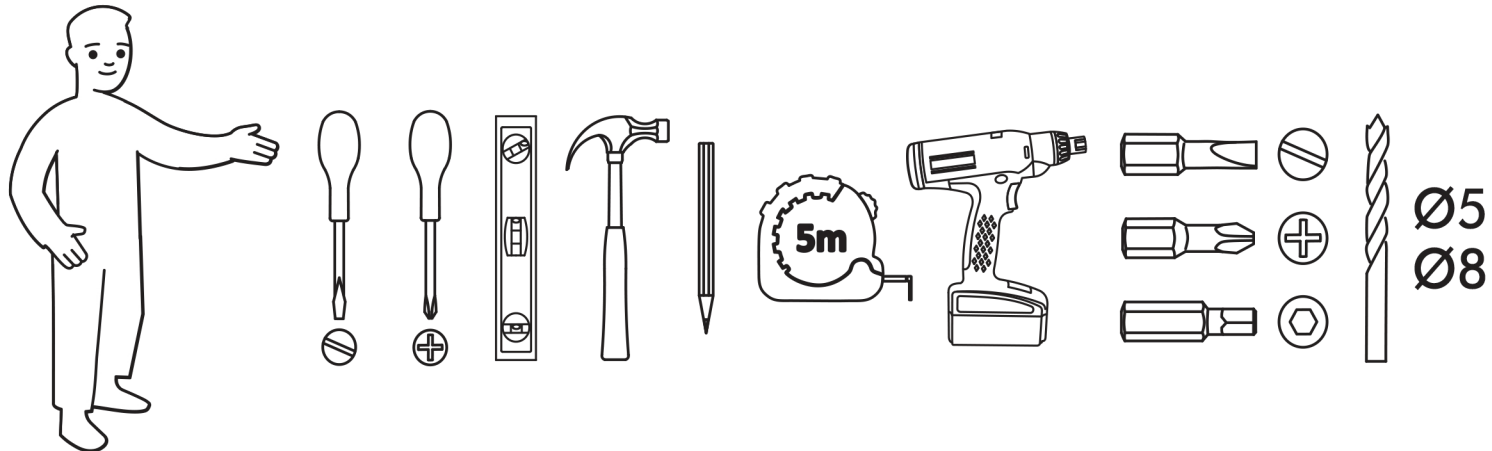


RU Внимание! Чтобы избежать неприятных последствий, воспользуйтесь услугами профессиональных сборщиков мебели. Производитель оставляет за собой право вносить изменения в конструкцию изделий, не влияющие на функциональность и дизайн.

EN Attention! To avoid unpleasant consequences, use the services professional furniture assemblers. The manufacturer reserves the right make changes to the design of products, not affecting functionality and design.

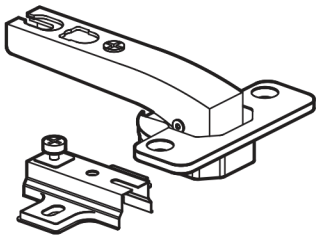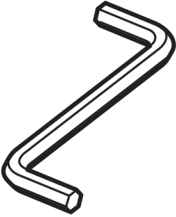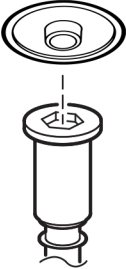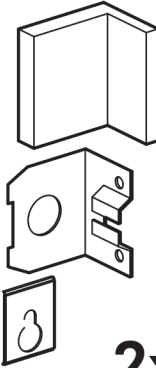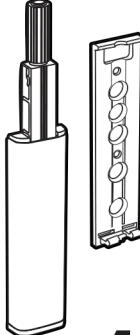		6,3x50		3,5x16	6,3x13	1,6x25
		 13x		 19x	 5x	 26x
 13x	 4x	 4x	 2x	 1x		

1 2 3	AI		2 1 2 1	L=mm		
1	Крышка / Cap		2	920	500	1/2
2	Фальшпанель / Raised panel		1	400	520	1/2
3	Бок / Side		2	368	500	1/2
4	Фасад / Front		1	396	396	1/2
5	Задняя стенка / Back wall		1	916	396	1/2

1.

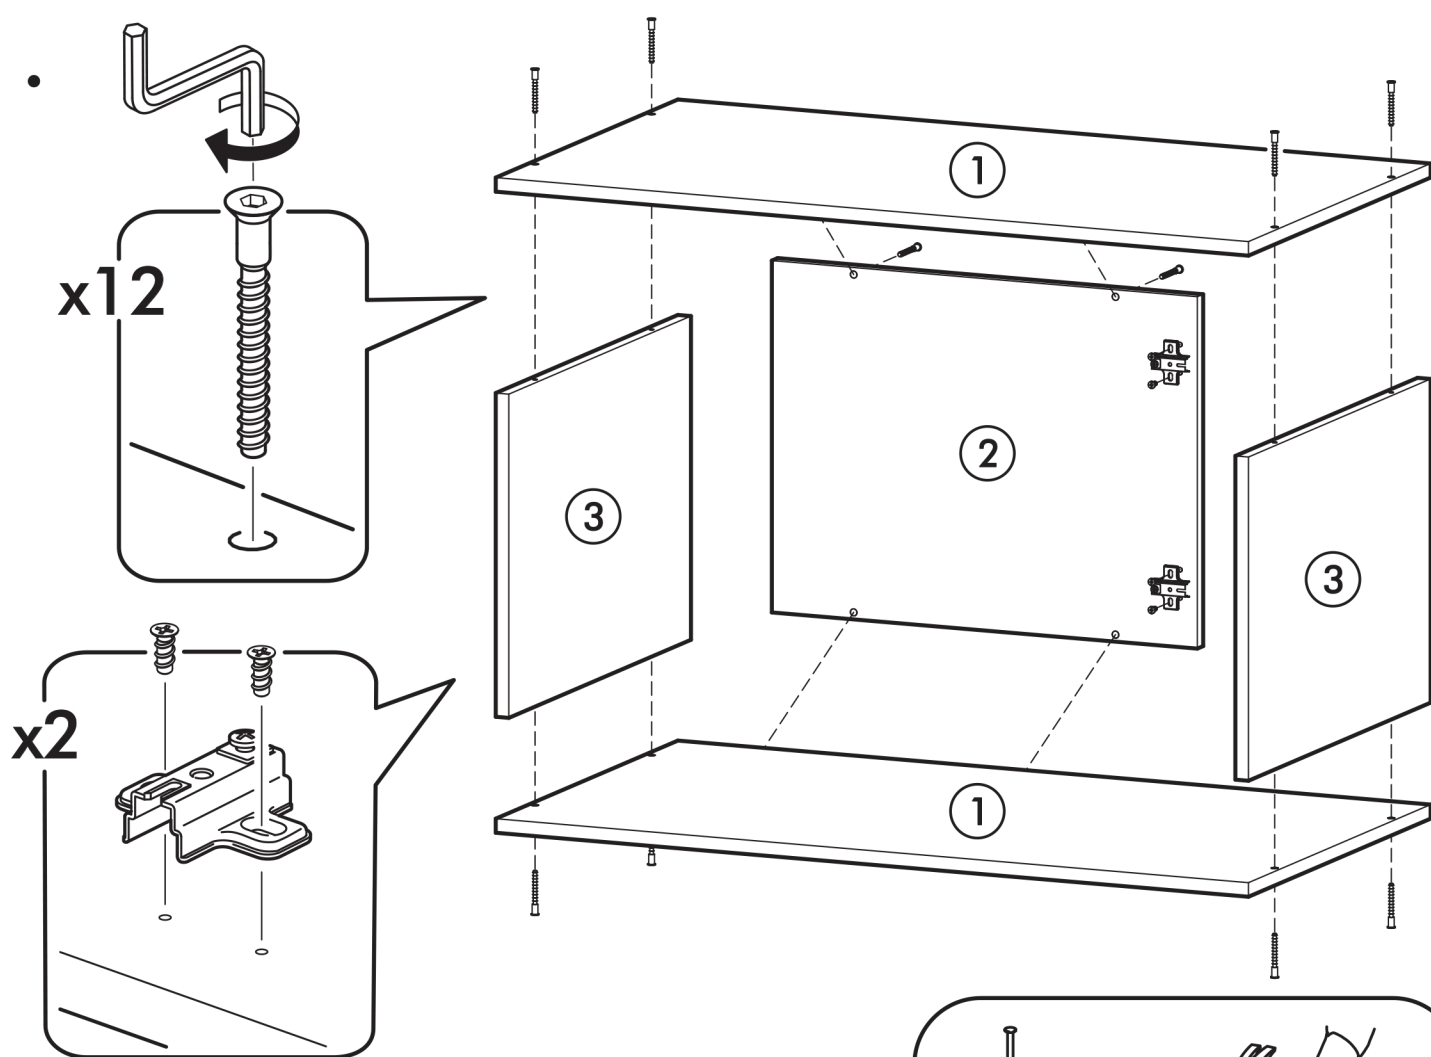

2.




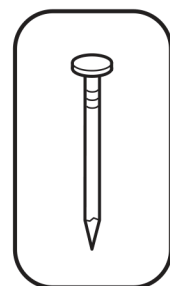


Diagram 4 shows the top panel being attached to the frame. The panel is a large, light-colored rectangle. The frame is a dark-colored L-shaped structure. The panel is being lowered into place, and the number 4 is shown in a circle in the center of the panel. Dashed lines indicate the alignment of the panel with the frame. A small inset shows a corner detail of the panel and frame.

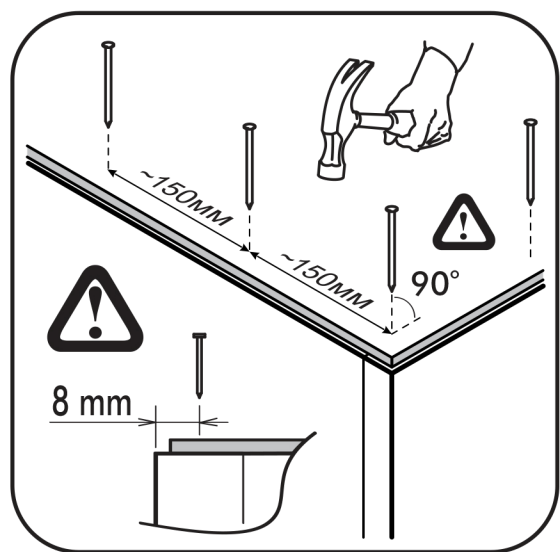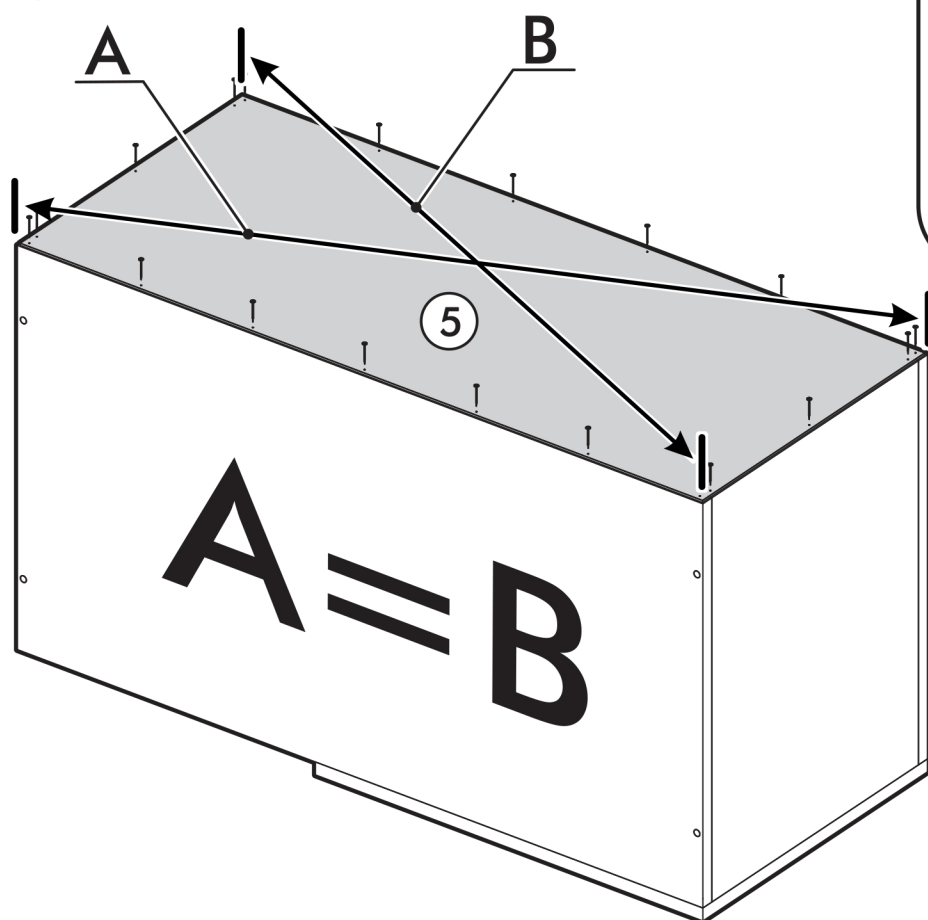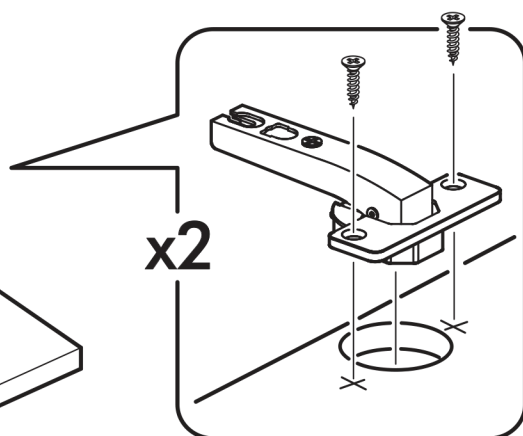

4.






1

2




x1

+4mm


-1mm

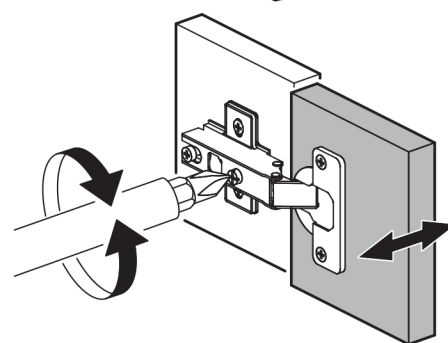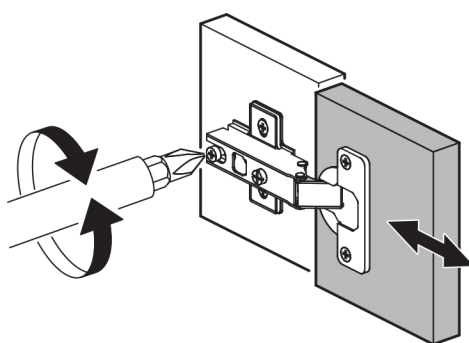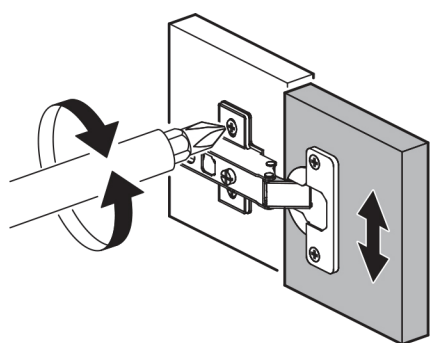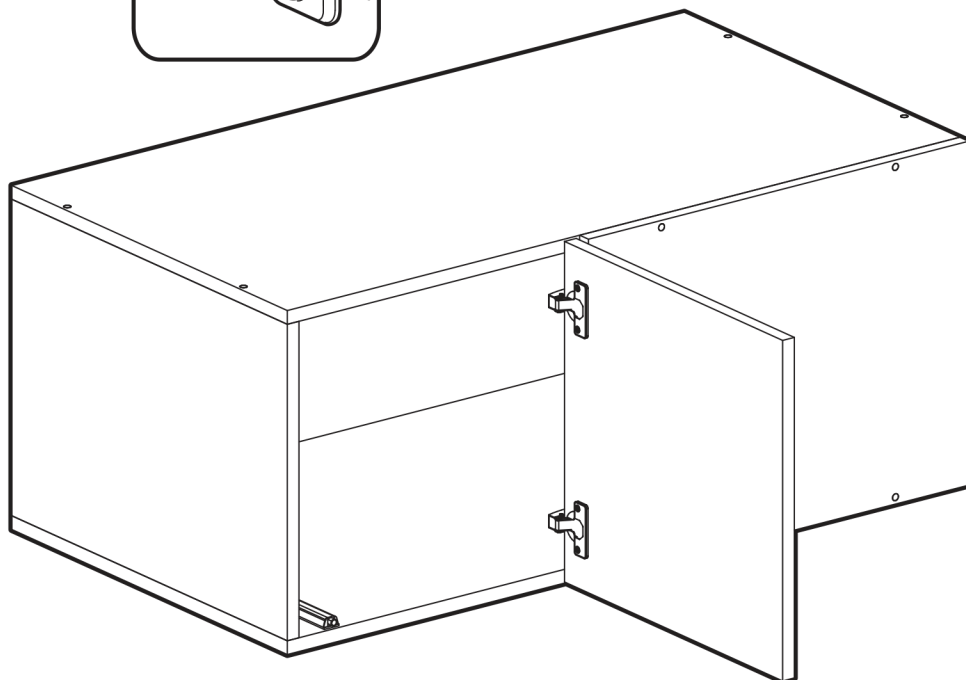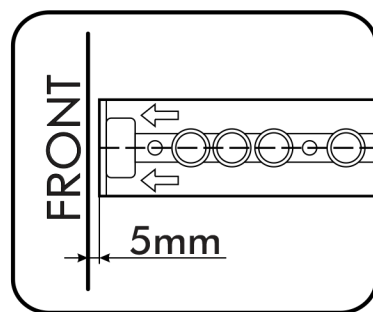

5a.

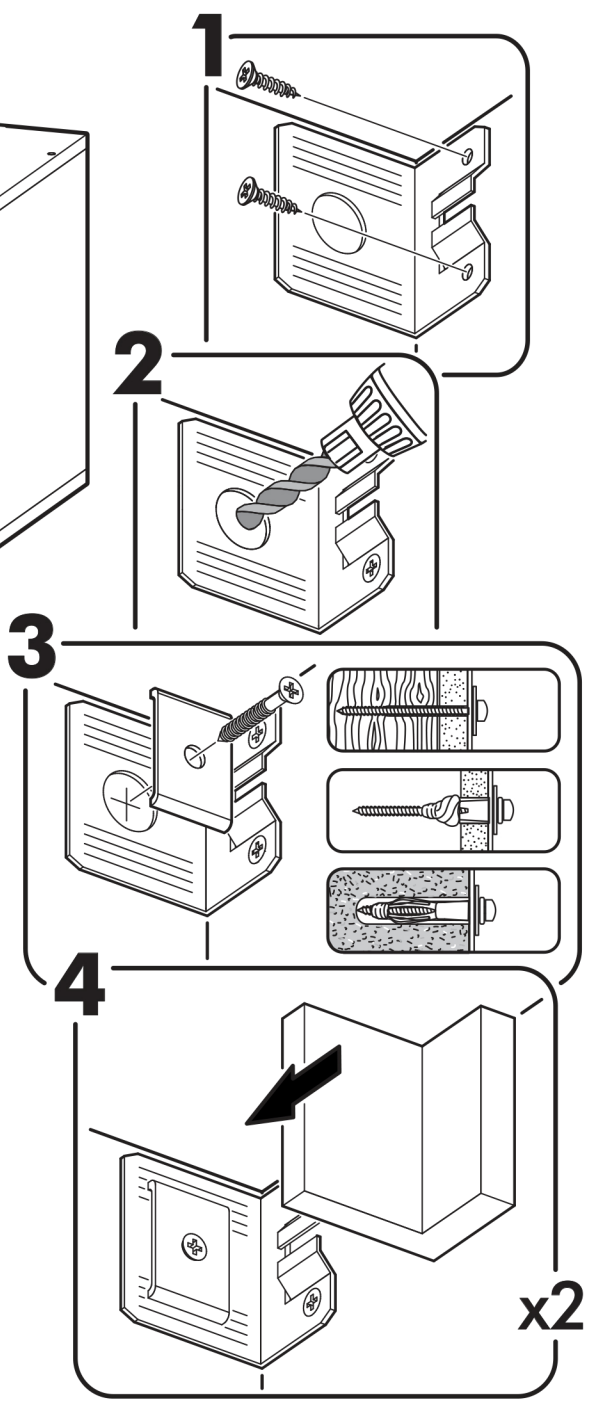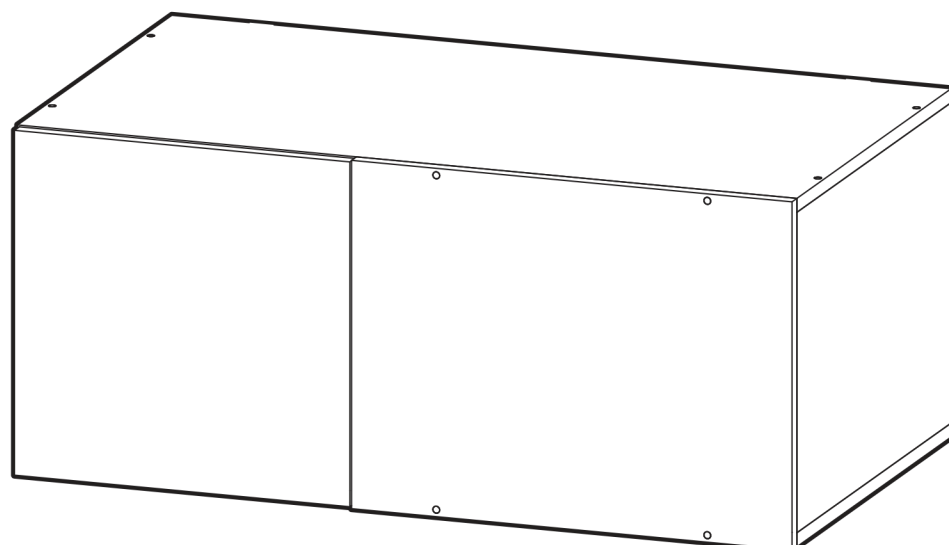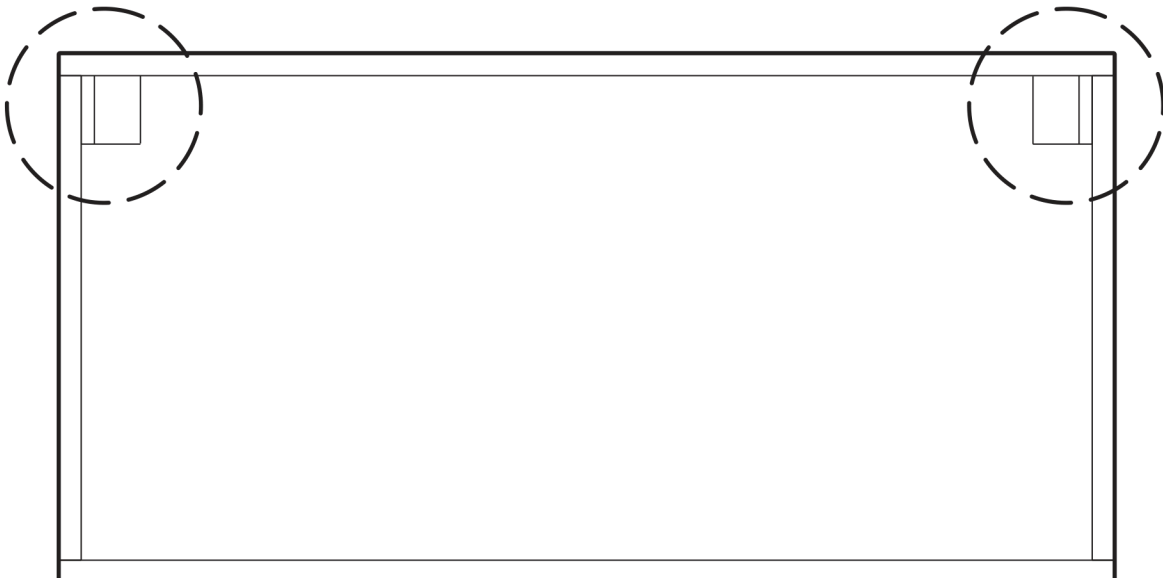

5b.

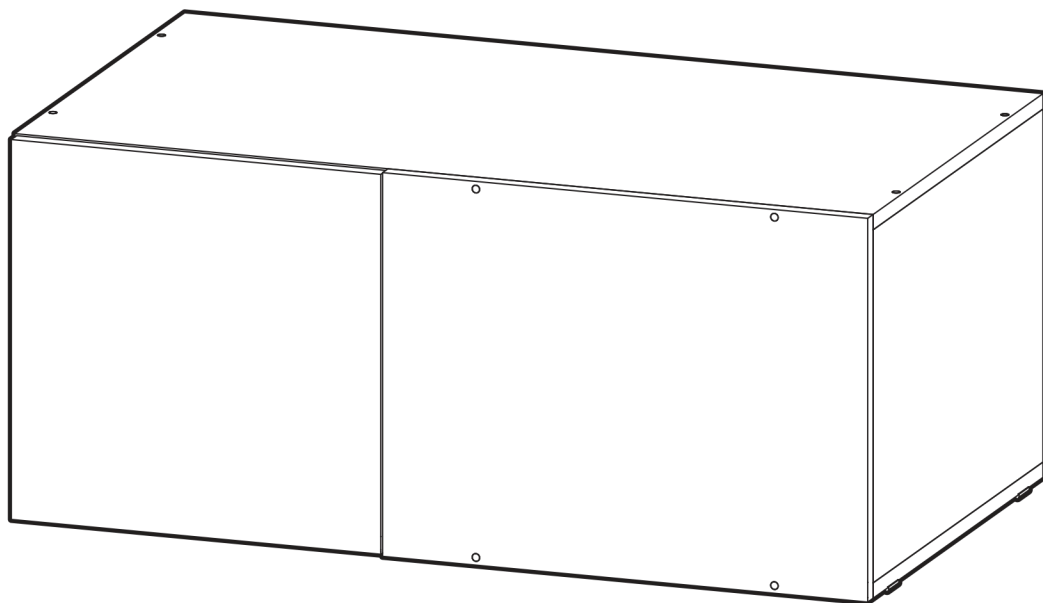

5c.

